




A wish for wellness...

Water Dispenser

Instruction manual

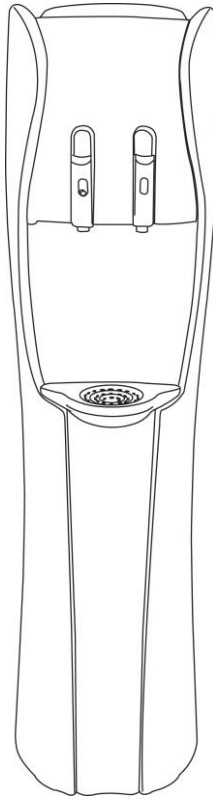

Model No.: ATLANTIS

**PLEASE READ THESE INSTRUCTIONS COMPLETELY
BEFORE USING THIS PRODUCT.**

THIS PRODUCT IS DESIGNED FOR HOUSEHOLD USE ONLY.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:


1. Read all instructions.
2. Do not let cord hang over edge of table or counter, or touch hot surfaces
3. To protect against electric shock, do not immerse cord, plug, or dispenser body in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning.
6. Do not operate any appliances with a damaged cord, plug or after the appliances malfunction, or has been damaged in any manner. Return the appliances to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliances manufacturer may cause injuries.
8. Do not use in outdoors.
9. Allow at least 2”(5cm) of space between the back of the water dispenser and the wall to allow for proper air circulation.
10. Install the water dispenser on a level floor. Do not install where it will be subject to direct sunlight, heat or moisture.
11. Do not install the water dispenser where the temperature will go below 59°F(15°C) or above 100.4°F(38°C).
12. Do not plug in the power cord or turn on the power switch when the water dispenser is empty.
13. To disconnect the power cord, turn the switch to “off “, then remove plug from wall outlet.
14. Always wash and dry your hands thoroughly before touching the water dispenser.
15. Extreme caution must be used when moving an appliance contain hot liquid.
16. Wipe up any water spills immediately after loading or unloading water bottles.
17. Do not use this dispenser to dispense anything other than water.
18. Do not use with water that is micro biologically unsafe or of unknown quality.

SAVE THESE INSTRUCTIONS

19. This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock.
20. This appliance has a power cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. The water dispenser is intended to be plugged into a receptacle of the ground fault circuit interrupting type (GFCI) for water dispenser installations.
21. Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.
22. If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.
23. Do not under any circumstances cut or remove the third (ground) prong from the power cord.
24. Do not use an adapter plug with this appliance.
25. Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician install an outlet near the appliance.
26. For best operation, plug the appliance into its own electrical outlet on a dedicated circuit to prevent flickering of lights, blowing of fuse, or tripping of circuit breaker.
27. Never place your fingers or any sharp metal object inside the water dispenser, as doing so may damage the cooler, and also increase the risk of electric shocks.
28. Do not place the appliance in water-area.
29. Do not immerse the appliance in the water to clean.
30. The appliance shall not be exposed to rain.
31. To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
32. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

GENERAL DESCRIPTIONS

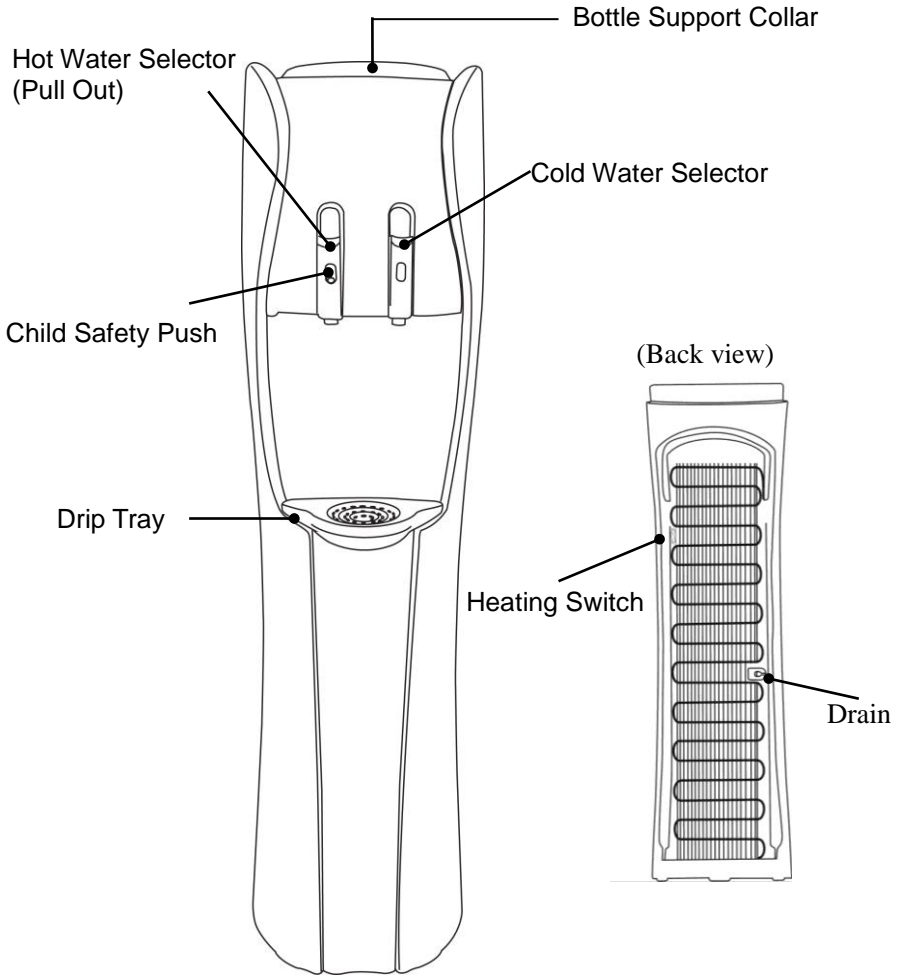

INSTALLATION

1. Locate water cooler in a well-ventilated space where temperature is always above freezing.
2. Insure proper ventilation by maintaining a minimum clearance of 4" (64mm) on sides and rear of cooler . Make sure cooler is on a level surface.
3. Allow the water cooler to stand upright for approximately 24 hours before connecting the power source. This will let the compressor settle from being handle during transportation.
4. Place the bottle on top of the cooler and into the bottle support collar.
5. Verify that the hot tank ON/OFF switch on the back of the unit is off. Plug the power cord into an electrical outlet.

NOTE: The water dispenser is intended to be plugged into a receptacle of the ground fault circuit interrupting type (GFCI).

6. Follow filter system manual to install the filtration system if the unit is connected to a water filter system.
7. Wait about 10 minutes for the cold tank to be fully filled (time may vary).
8. Press and hold the Hot Water Selector and wait for tune and red light lit at Water Outlet, about 1 second. Place a container under the Water Outlet and, then, press and hold Water Dispense button until a steady stream of water flows from Water Outlet.
9. Place a container under the Water Outlet. Press and hold Cold Water Selector and wait for tune and blue light lit at Water Outlet, about 1 second. Press and hold Water Dispense button until a steady stream of water flows from Water Outlet.
10. Turn on the Heating switch located on the back of the unit. Allow 40 minutes for water to reach hot and cold temperature.

NOTE: Do not use this cooler to chill or heat any liquids other than potable water. Inlet water supply pressure should not exceed 85PSI.

USING THE WATER DISPENSER

Dispensing Water:

1. Place a glass or cup under the Water Outlet.
2. For hot water, press and hold the Hot Water Selector and wait for tune and red light lit at Water Outlet, about 1 second. Then, press and hold Water Dispense button. Release the button when the desired water volume is reached.
3. For cold water, press and hold the Cold Water Selector and wait for tune and blue light lit at Water Outlet, about 1 second. Then, press and hold Water Dispense button. Release the button when the desired water volume is reached.

Removing and assembling the Drip Tray:

1. Pull out the Drip Tray away from the dispenser to empty and clean.
2. Push in the Drip Tray to assemble.

NOTE: Clean and empty the Drip Tray regularly to ensure the proper hygiene.

Draining the dispenser:

1. Set Heating Switch (on the back of the dispenser) to "0"(off) position and unplug the power cord. Let the unit cool before draining.
2. Disconnect water supply.
3. Place a bucket near the Drain Hole.
4. Remove the Drain Plug from the Drain Hole and allow water to drain.

CAUTION: Water from Drain Hole may be hot.

5. After draining, replace the Drain Plug

NOTE: Always keep the Drain Plug in place after draining.

CLEANING

CAUTION: Set Heating Switch (on the back of the dispenser) to "0"(off) position and unplug the power cord before cleaning.

Sweep away or vacuum any dust from the condenser coils on the back of the unit. For best results, use a brush specially designed for this purpose. It is available at most appliance stores.

ALL PLASTIC PARTS ARE DISHWASHER SAFE

Drip tray/drip tray grill and shell can be cleaned with any non-abrasive household cleaner.

To prevent damage to plastic parts, avoid abrasive cleaning aids such as steel wool etc.

MAINTENANCE

Condenser: To ensure optimum cooler performance, condenser must be maintained free of dust and lint. Condenser must be regularly inspected and cleaned with brush.

Drip Tray: The drip tray should be emptied and cleaned regularly. To remove, pull tray straightforward from the cabinet.

Storage/Return Shipment: If the cooler is removed from service, the water must be completely drained from the system.

WARNING

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.